

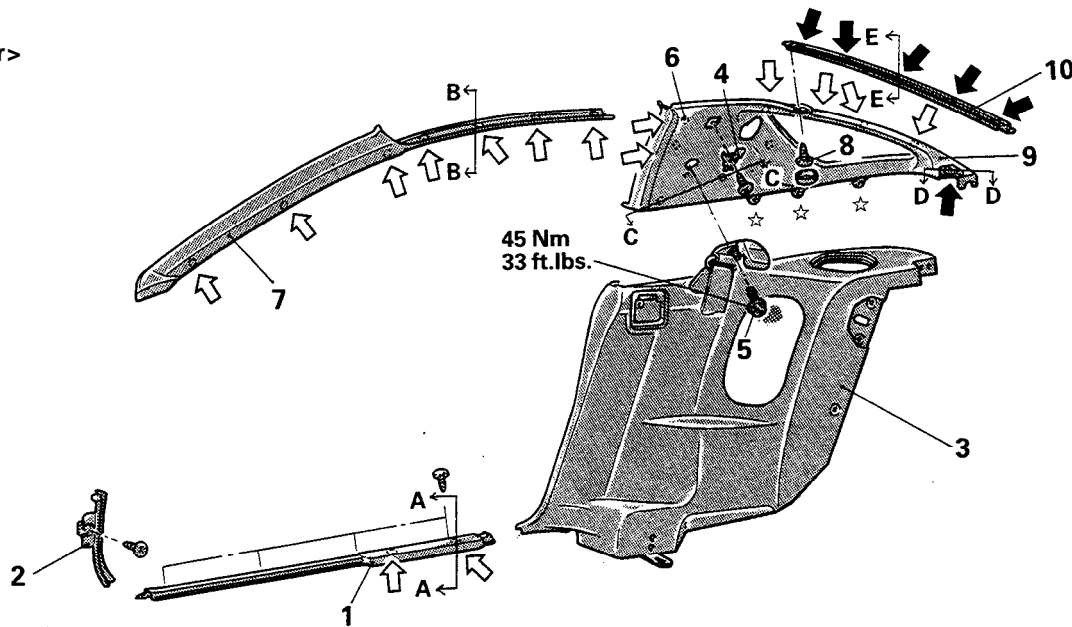
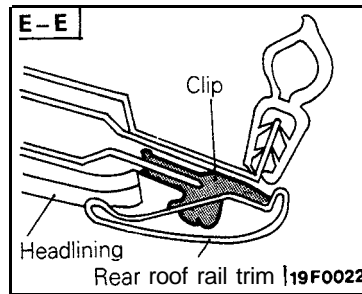
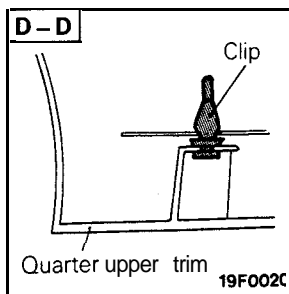
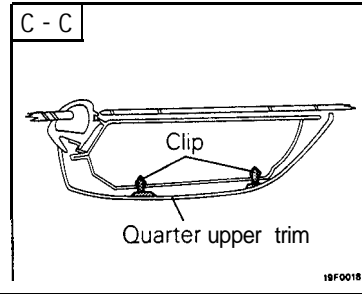


# REMOVAL AND INSTALLATION

<Interior>

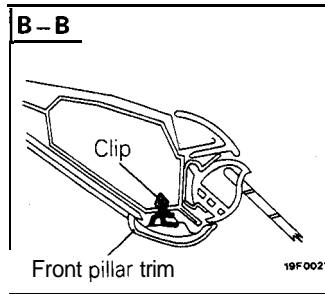

19F0033

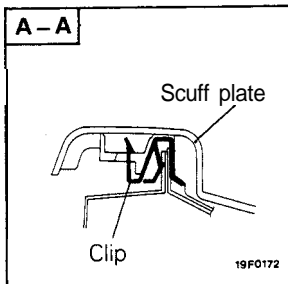

## Cowl side trim removal steps

1. Scuff plate
2. Cowl side trim

## Front pillar trim removal steps

4. Hanger bracket
5. Sash guide cover mounting bolt
6. Clip
7. Front pillar trim

## Quarter upper trim removal steps


3. Quarter trim (Refer to P.52A-14.)
4. Coat hanger
8. Screw
9. Quarter upper trim

## Rear roof rail trim removal steps

8. Screw
10. Rear roof rail trim


## NOTE

- (1) : Location of metallic clip
- (2) : Location of resin clip
- (3) ☆ indicates trim clip. (Refer to P.52A-12.)
- (4) For door trim, refer to GROUP 42 – Door Trim and Waterproof Film.

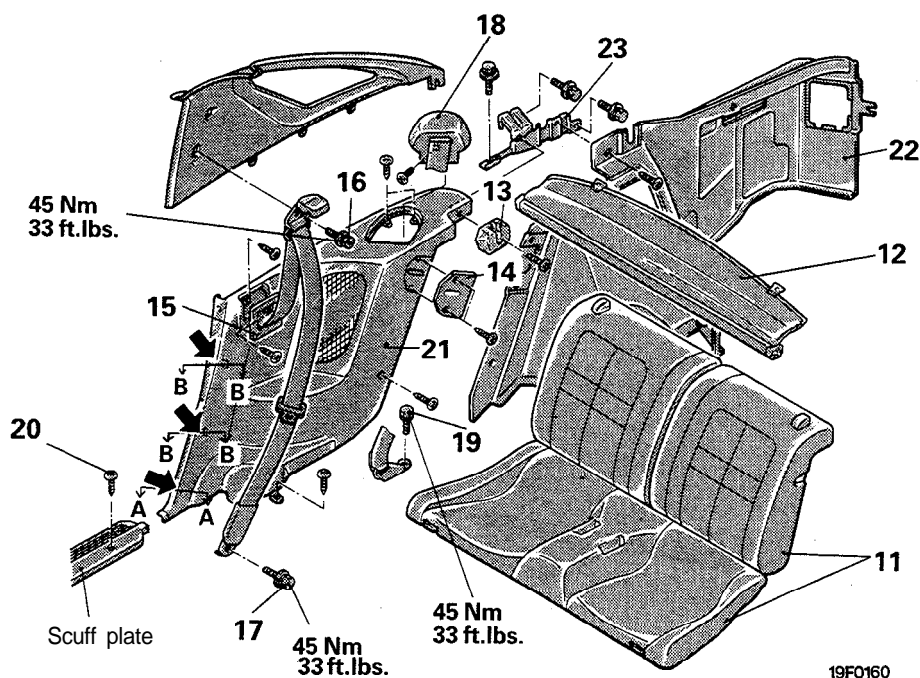


19F0160

A-A

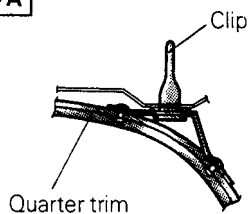

19F0046

B-B

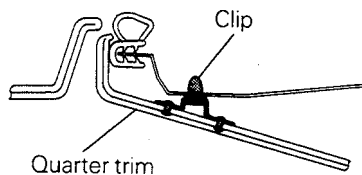

19F0014

### Quarter trim removal steps

- ◆◆◆◆ 11. Rear seat
- 12. Shelf cover assembly
- 13. Shelf catcher
- 14. Cover
- 15. Garnish
- 16. Sash guide cover mounting bolt
- 17. Front seat belt anchor plate mounting bolt
- 18. Retractor cover

- 19. Rear seat belt anchor plate mounting bolt
- 20. Screw
- 21. Quarter trim
- 22. Rear side trim (Refer to P.52A-15.)
- 23. Quarter trim bracket


### NOTE

◀: Location of resin clip

## SERVICE POINT OF REMOVAL

### 11. REMOVAL OF REAR SEAT

With the lever pulled forward, raise the seat cushion to remove it.

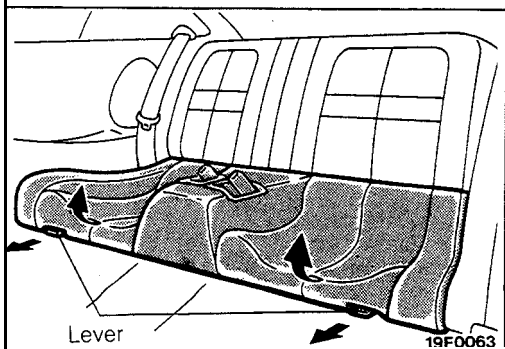

TSB Revision