

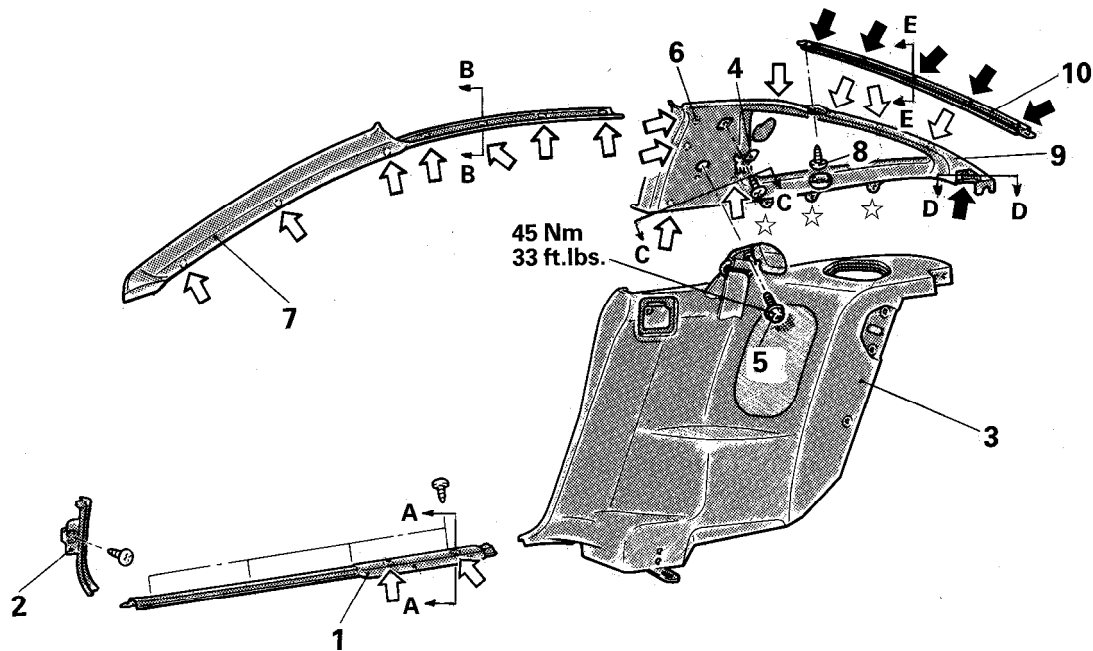
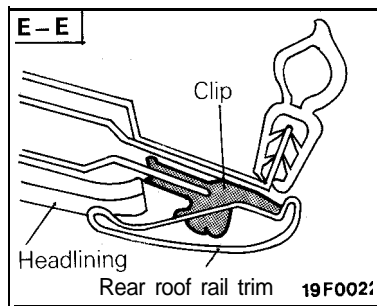
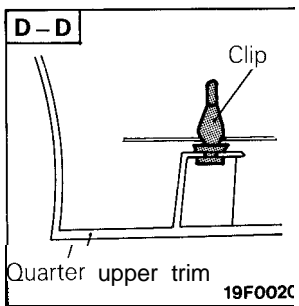
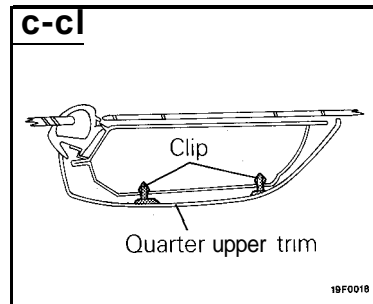


REMOVAL AND INSTALLATION

<Interior>

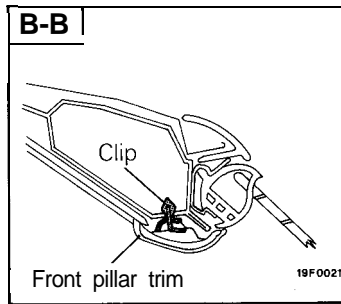

19F0042

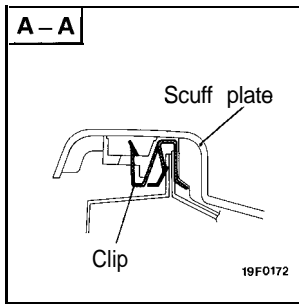

Cowl side trim removal steps

1. Scuff plate
2. Cowl side trim

Front pillar trim removal steps

4. Hanger bracket
5. Sash guide cover mounting bolt
6. Clip
7. Front pillar trim

Quarter upper trim removal steps




3. Quarter trim (Refer to P.23A-92.)
4. Coat hanger
8. Screw
9. Quarter upper trim

Rear roof rail trim removal steps

8. Screw
10. Rear roof rail trim

NOTE

- (1) ⇄: Location of metallic clip
- (2) ◀: Location of resin clip
- (3) ☆ indicates trim clip. (Refer to P.23A-90.)
- (4) For door trim, refer to P.23A-68.

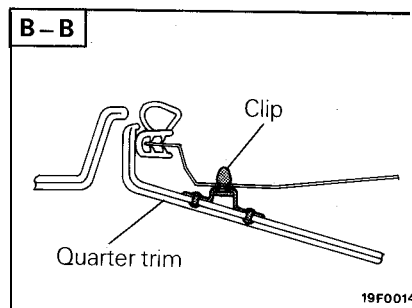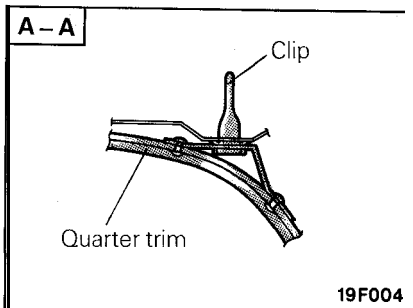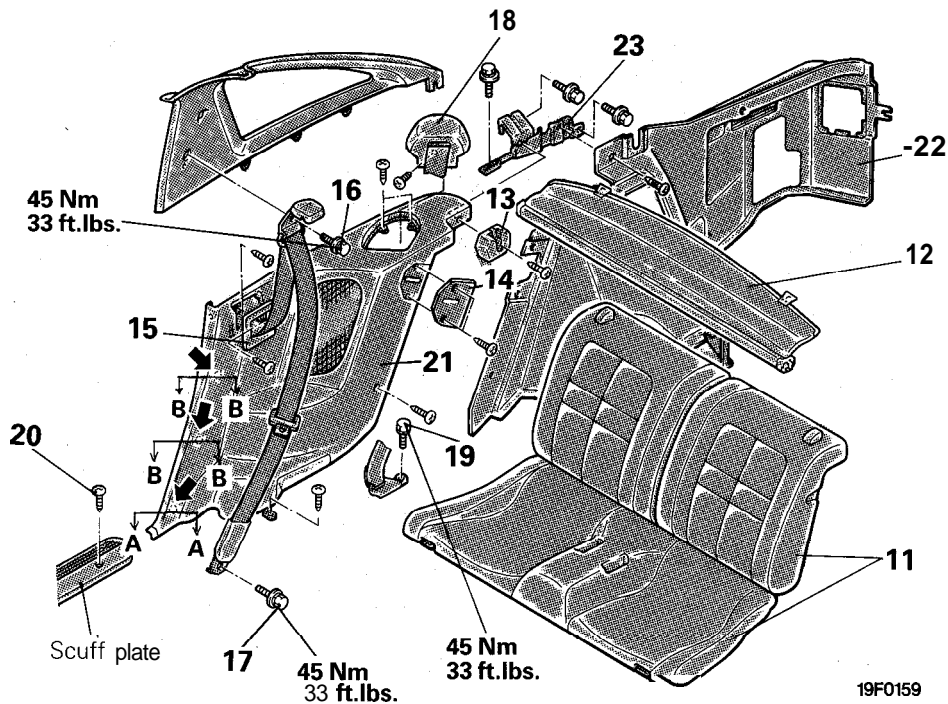

Quarter trim removal steps

- | | |
|--|---|
| ◆◆◆◆ 11. Rear seat | 19. Rear seat belt anchor plate mounting bolt |
| 12. Shelf cover assembly | 20. Screw |
| 13. Shelf catcher | 21. Quarter trim |
| 14. Cover | 22. Rear side trim (Refer to P.23A-93.) |
| 15. Garnish | 23. Quarter trim bracket |
| 16. Sash guide cover mounting bolt | |
| 17. Front seat belt anchor plate mounting bolt | |
| 18. Retractor cover | |

NOTE

◀: Location of resin clip

SERVICE POINT OF REMOVAL

11. REMOVAL OF REAR SEAT

With the lever pulled forward, raise the seat cushion to remove it.

